

AVICSYNC Firmware Update Instructions for AVIC-70DAB & AVIC-F970DAB

CAUTION

- **Note:** AVICSYNC Fuel Pricing service is not available in Australia.
- **Note:** Any changes introduced to 3rd party smartphone applications that are compatible with AVICSYNC, are outside of the control of Pioneer Electronics Australia Pty Ltd.
- **Note:** To access various functionality of AVICSYNC, users will be required to purchase compatible smartphone apps.
- Once upgraded to this version, it is not possible to downgrade to a lower version
- Never turn your unit off, eject the SD memory card or disconnect the USB storage device while the firmware is being updated.
- You can only update the firmware when the vehicle is stopped and the parking brake is engaged.

IMPORTANT

Please download and print these Firmware Update instructions before downloading and installing the firmware update. It is important that you complete all steps correctly and in the order described below. If you have any hesitations or concerns, please contact Pioneer Support, prior to performing this update - **1800 672 102**.

IMPORTANT (For navigation system users)

- If you install this Firmware, all navigation function settings and save data will be formatted. Once the update has finished, you will need to reconfigure the settings.
- Any content purchased and added through Naviextras will also need to be re-installed. Note that no charges will be incurred to download previously purchased content.

In order to perform this update, the following items are needed:

- Pioneer products: AVIC-F70DAB and AVIC-F970DAB
- A SD memory card or USB storage device with the following requirements:
 - 2 GB or larger in capacity, formatted to FAT32
 - Should be blank (should not contain any files)

Displaying the firmware version

Check whether the firmware of your unit needs to be updated by checking the version number of the firmware.

 
Procedure:

1. Press the HOME button to display the Top menu screen.
2. Touch the following keys in the following order.




The "System" screen appears

3. Scroll down the list.

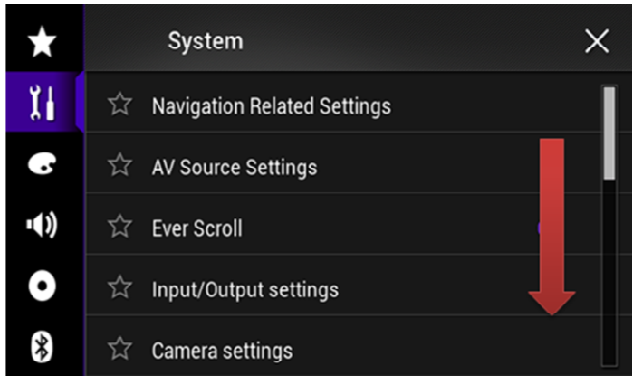

 4. Touch [System Information].

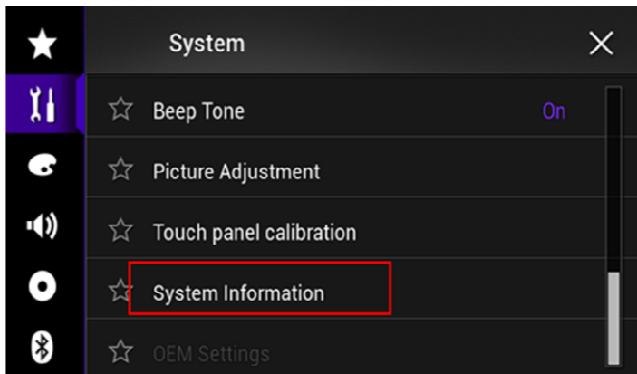

5. Touch [Firmware Information].



6. After the "Firmware Information" screen appears, check the firmware version number.

Downloading the firmware update files from Pioneer's website

NOTE: If you have any difficulty Performing these instructions, please contact PIONEER SUPPORT on 1800 672 102.

Once upgraded to this version, it is not possible to downgrade to a lower version.

1. Download the file **AVIC-F70DAB_AU_FW-Update_V1.05.zip** from the website to a folder on your computer.
2. Double click the ZIP file named **AVIC-F70DAB_AU_FW-Update_V1.05.zip** to open it.
3. Extract the folder **AVIC5100NEX** to a folder on your computer.

Updating the firmware on your Unit

IMPORTANT

- DO NOT perform any further steps of this firmware update if the model number is anything other than your unit.
 - Check the model number of your system to confirm that you are using a unit.
 - Find the model number of your unit at the lower or upper right corner of the face panel.
- Ensure that the update file is located within the root (top) folder of your SD memory card or USB storage device. There should be no other files within the SD memory card or USB storage device.
- While your unit is being updated, DO NOT turn off the system's power and DO NOT touch the unit's touch panel screen as this may result in severe damage to your unit.
- DO NOT remove the SD memory card or USB storage device during the firmware update process.
- Performing the firmware update will restore all settings to their default values.
- Disconnect any mobile devices that are currently connected to your unit.

 
Procedure:

1. Connect a blank (formatted) SD memory card or USB storage device to your computer, and then locate the correct update file and copy it onto the SD memory card or USB storage device.
2. Insert an SD memory card into the SD card slot or connect the USB storage device to the USB port.
3. Turn the source off on your unit.
4. Press the HOME button to display the Top menu screen.
5. Touch the following keys in the following order.




The "System" screen appears.

6. Scroll down the list.

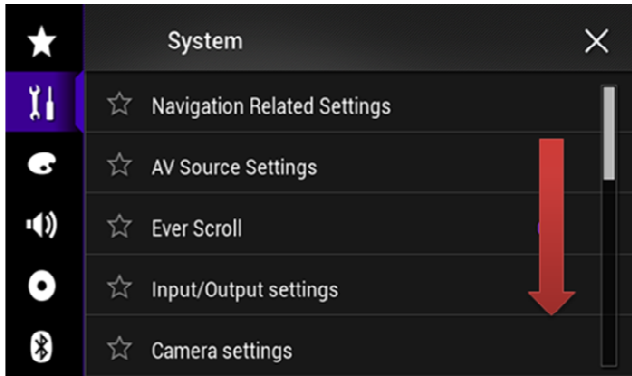

 7. Touch [System Information].

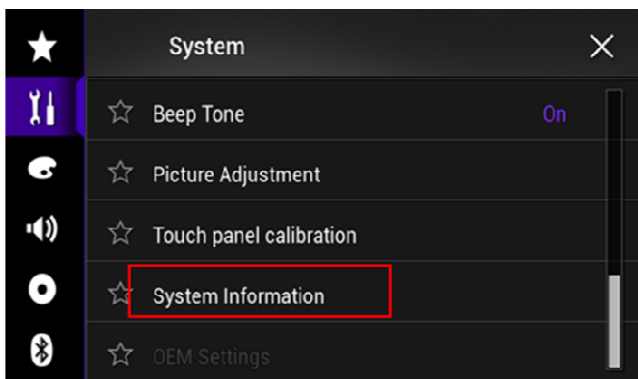


8. Touch [Firmware Update].




The "Firmware Update" screen appears.

 
9. Touch [Continue] to display the data transfer mode.

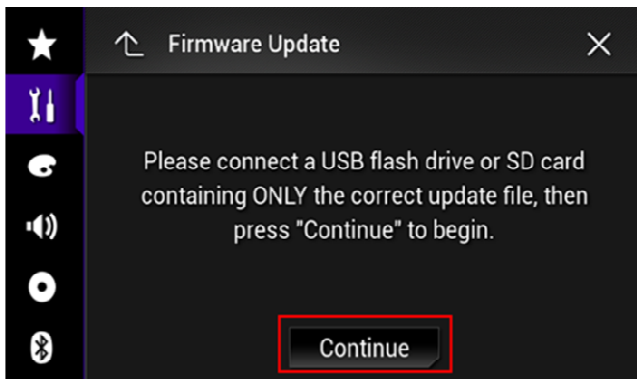

 
Wait for completion of processing of file check.

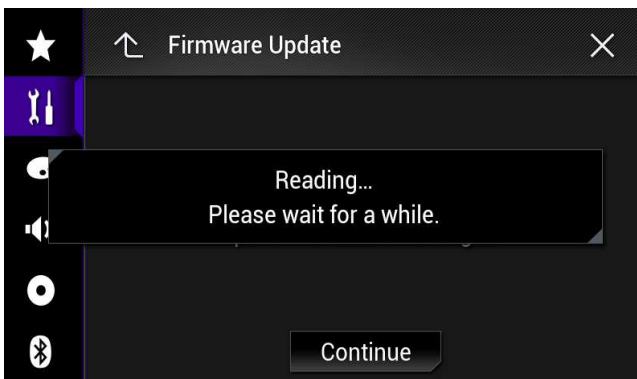

 10. Touch [Start].

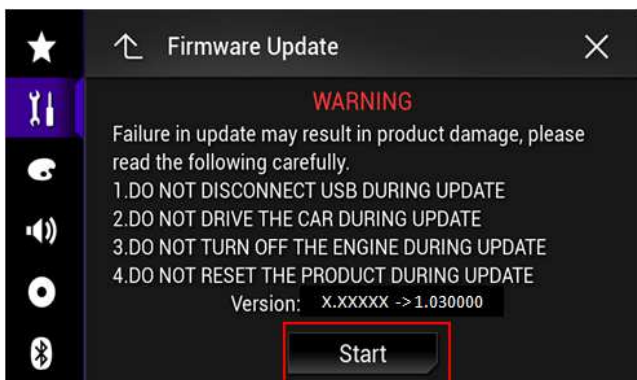

Progress status is shown.

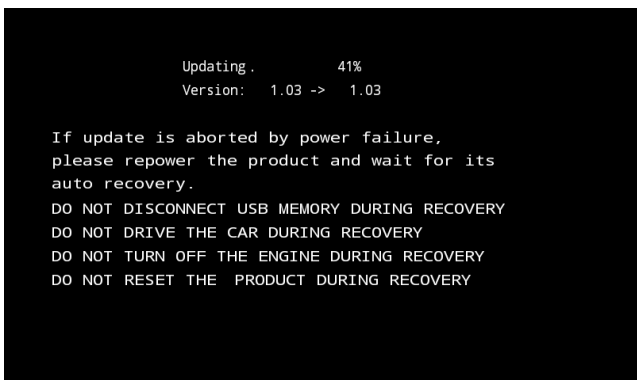 

11. Wait until the update process is complete.

Once the firmware update process is complete, the unit will display the "Update Complete" screen.



12. Press the HOME button.
13. Remove the SD memory card or USB storage device.
14. The firmware update is complete.

Check if the firmware has been updated

Perform the same procedure for "Displaying the firmware version" to check if the firmware has been updated.

 
Procedure:

1. Press the HOME button to display the Top menu screen.
2. Touch the following keys in the following order.




The "System" screen appears


3. Scroll down the list.

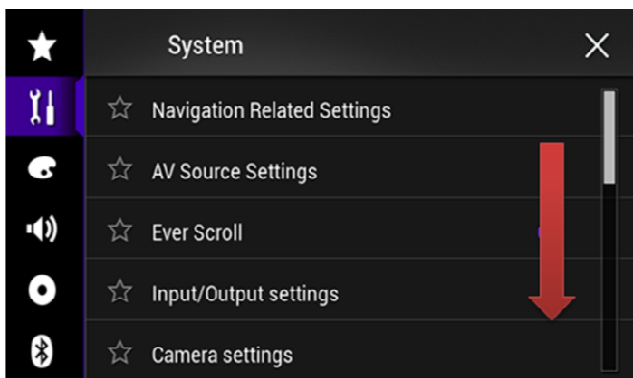

 4. Touch [System Information].

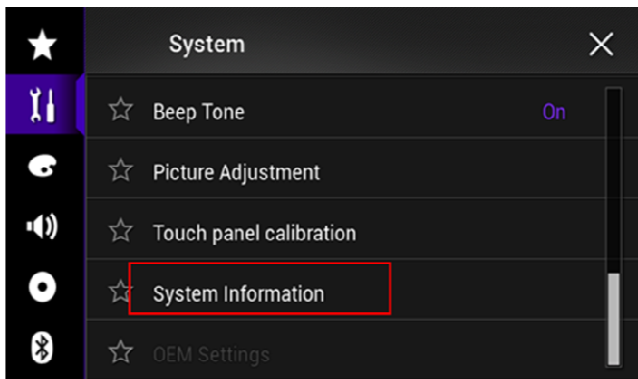

 5. Touch [Firmware Information].

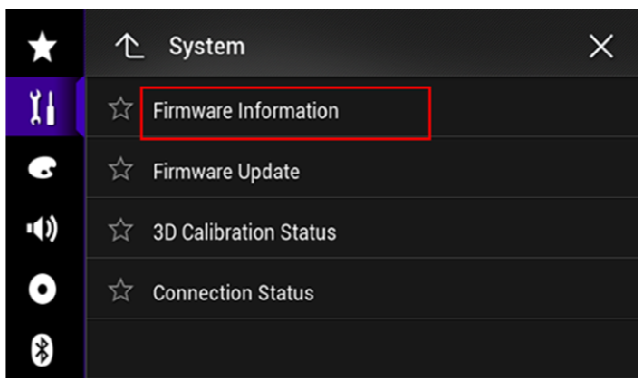

6. After the "Firmware Information" screen appears, check the firmware version number.

CONTACT INFORMATION

Pioneer Australia Customer Support

1800 672 102.

www.pioneer.com.au

Copyright(c) 2015 Pioneer Corporation